

 
# Fan Assembly Replacement Instructions

## (For use only with Models 605RP, 665RP, 668RP )


Your existing fan assembly is no longer available. It has been replaced with the parts supplied.  
For future reference - please attach this page to your existing instruction manual.

### Remove Existing Fan Assembly.

1. Turn off power to unit.

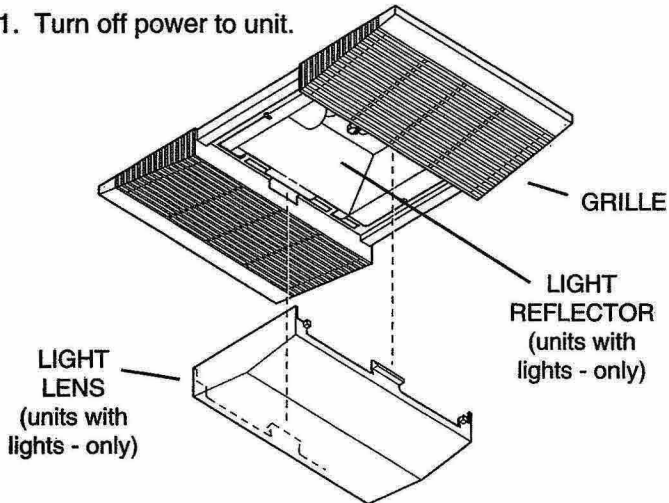


 2. Remove light lens and light reflector (units with lights - only).
3. Remove grille from housing.

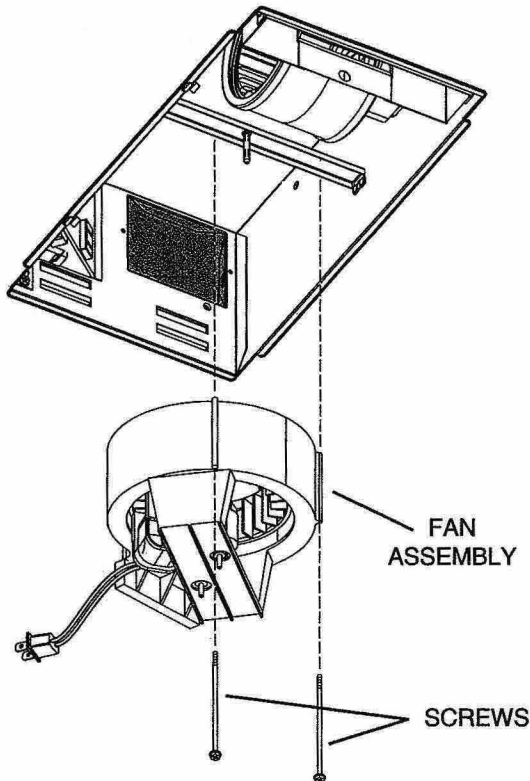


4. Unplug motor and remove two (2) screws holding fan assembly in place. Remove fan assembly from housing.  
**CAUTION:** Hold fan assembly securely when removing screws - to keep assembly from falling.

### Install New Fan Assembly.

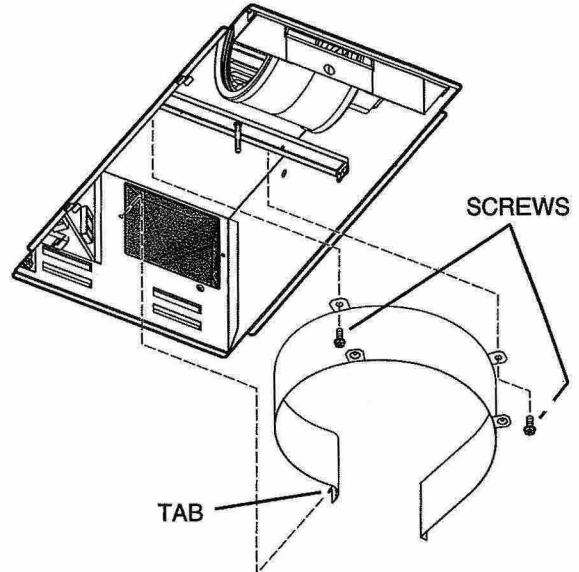 

 5. Install new scroll band into housing. Insert tab on scroll band into hole in housing and secure with two (2) screws provided.

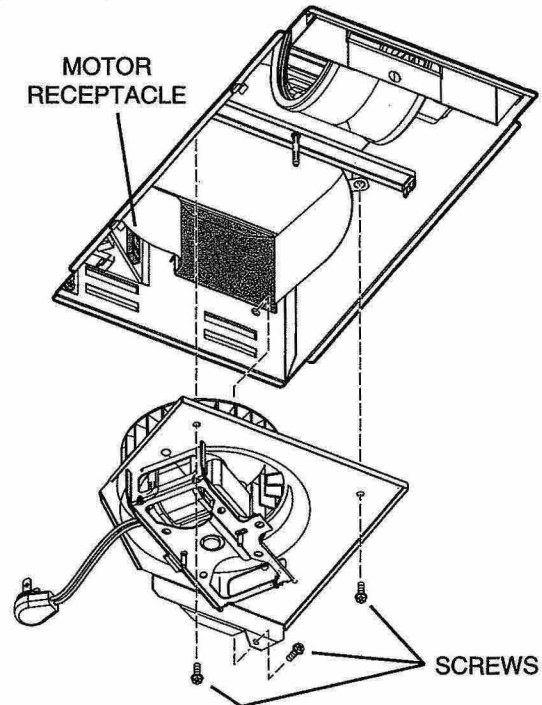

6. Install new fan assembly into housing and secure with three (3) screws provided.
7. Plug motor into receptacle shown.
8. Replace grille, (light reflector and light lens).
9. Turn on power and check operation.

