QT FAN/LIGHT SERVICE GRILLE REPLACEMENT

WARNING 🕰 🔏






DISCONNECT THE ELECTRICAL POWER SUPPLY AND LOCK OUT THE SERVICE PANEL FOR THE **EXISTING FAN/LIGHT.**

REMOVE GRILLE ASSEMBLY

ALL MODELS SPRINGS

- 1. Pull grille assembly down from ceiling to expose two SPRINGS. Squeeze each spring together and remove from the pair of tabs on each side of housing.
- 2. Unplug grille assembly from housing or ballast receptacle.

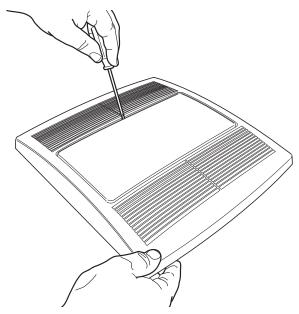


- 3. Remove light lens from grille assembly by inserting a small flat-blade screwdriver between grille and lens locking tab. and prying lens out.
- 4. Carefully remove fluorescent bulb(s) and night-light bulb, and dispose of appropriately, according to local laws and requirements. Discard remaining grille assembly and lens.
- 5. If necessary, vacuum interior of fan with a dusting brush attachment for continued quiet and efficient operation, long life, and attractive appearance.
- 6. Check unit's specification label on side of housing or on motor plate to determine current lamp type and wattage. Proceed to the "REPLACE GRILLE" section for your type of lamp.


REPLACE GRILLE




MODELS WITH (2) 18W GU24 FLUORESCENT LAMPS

1. No special assembly or disassembly requirements necessary. Continue to "INSTALL NEW GRILLE" section.

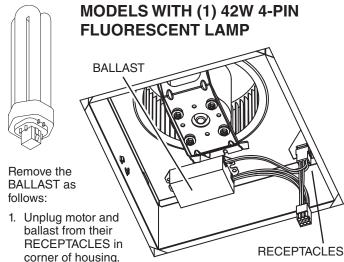


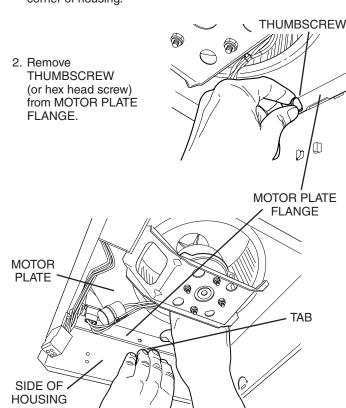


3. Find the single TAB on the MOTOR PLATE (located next to the motor's receptacle). Push up near motor plate tab while pushing out on SIDE OF HOUSING. Or insert a flat-blade screwdriver into slot in housing (next to tab) and twist screwdriver. Pivot motor plate down and remove.

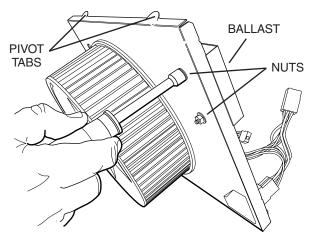

 Remove (2) NUTS securing BALLAST using 11/32" socket or wrench. Remove ballast and dispose of appropriately, according to local laws and requirements

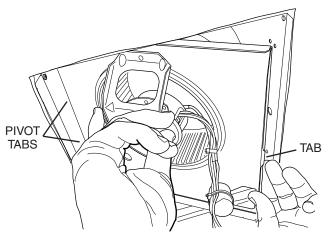

- 5. Reinstall blower assembly by inserting two motor plate PIVOT TABS into slots in housing and pivoting blower assembly up until the third motor plate TAB snaps into matching slot in opposite side of housing. Make sure tabs hold blower assembly securely in place.
- 6. Reinstall thumbscrew (or hex head screw).
- Plug motor onto its receptacle in corner of housing. Continue to "INSTALL NEW GRILLE" section.

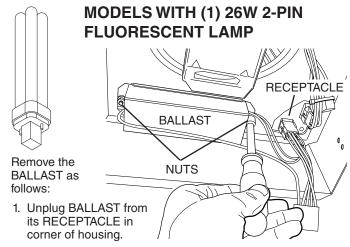


 Remove (2) NUTS securing ballast using 3/8" socket or wrench. Remove ballast and dispose of appropriately, according to local laws and requirements. Continue to "INSTALL NEW GRILLE" section.

INSTALL NEW GRILLE

ALL MODELS


(Grille style may vary from shown.)

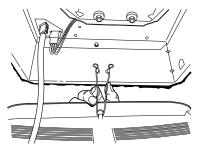


- 1. Plug grille assembly onto its receptacle in corner of housing.
- Squeeze one grille spring together and insert it into one pair of tabs on the side of housing. Repeat with the other grille spring.



3. Push grille assembly up until it is tight against the ceiling.

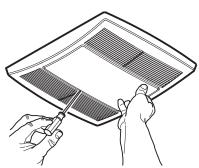

 Remove light lens from grille by carefully inserting a small flat-blade screwdriver between grille and lens locking tab and prying lens out.

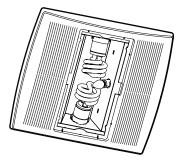

- Install light bulbs. (2) 18W fluorescent bulbs are supplied. Purchase a 4W incandescent night-light bulb. Insert bulbs into their sockets.
- 6. Replace light lens.